

Component list

6/59	Power window motor left rear	8/3	Magnetic clutch A/C
6/61	Power window motor right rear	8/6-10	Injectors
6/69	Servo motor, floor, defroster and ventilation shutter	8/17	EGR converter
6/95	Servo motor temperature damper left-hand side	8/28	Turbocharger (TC) control valve
6/96	Servo motor temperature damper right-hand side	8/35	Air distribution valve
6/97	Left cargo compartment fan	8/36	Solenoid P-shift lock
6/98	Right cargo compartment fan	8/37	Solenoids AW 50-42
6/105	Fuel rail	8/44	EVAP canister shut-off valve
		8/48	Rear view mirror
		8/49	Stop solenoid
7/1	Bulb failure warning sensor rear	8/50	Injection timing valve
7/4	Brake fluid level switch	8/75	Fuel shut-off valve
7/5	Washer fluid level sensor	8/76	Solenoid compressed natural gas (CNG) tank
7/6	Oil pressure sensor	8/145	Soft-top locking front
7/8	A/C pressure sensor		
7/11	Ambient temperature sensor ECC	9/1	Cigarette lighter / 12V outlet front
7/12	ECC sun sensor and indicator LED alarm / immobilizer	9/2	Rear demist
7/15	Heated oxygen sensor (HO2S) front	9/9	Backrest heater pad left rear seat
7/16	Engine coolant temperature sensor	9/11	Backrest heater pad right rear seat
7/17	Mass air flow (MAF) sensor / Air volume sensor	9/16	Backrest heater pad left seat
7/21	Camshaft position sensor (CMP)	9/17	Backrest heater pad right seat
7/23	Knock sensor (KS) rear	9/25	Cigarette lighter / 12V outlet back
7/24	Knock sensor (KS) front	9/26-27	Heater plugs coolant
7/25	Pulse sensor	9/31	Engine coolant heater
7/31	ABS sensor front left	9/32	PTC resistor air preheating
7/32	ABS sensor front right		
7/39	Antenna ring / Ignition lighting	10/1	Left headlamp
7/51	Accelerator pedal (AP) position sensor	10/2	Right headlamp
7/53	Pressostat A/C	10/3	License plate lighting
7/56	ABS sensor rear left	10/5	Left front fog lamp
7/57	ABS sensor rear right	10/6	Right front fog lamp
7/61	Input speed sensor	10/9	Left front turn signal lamp
7/62	Output speed sensor	10/10	Right front turn signal lamp
7/64	Cabin temperature sensor	10/15	Left side turn signal lamp
7/69	Outside temperature sensor combined instrument panel	10/16	Right side turn signal lamp
7/71	Boost pressure sensor	10/17	Right tail lamp
7/73	Coolant level sensor	10/18	Left tail lamp
7/74	Oil temperature sensor automatic transmission	10/19	High-mounted stop (brake) lamp
7/77	Temperature sensor intake air	10/20	License plate lighting left
7/81	Pressure sensor intake manifold	10/21	License plate lighting right
7/82	Heated oxygen sensor (HO2S) rear	10/22	Courtesy light
7/84	Fuel tank pressure sensor	10/24	Cargo area lighting
7/94	Needle lift sensor	10/26	Reading lamp rear left
7/96	Movement detector left	10/27	Reading lamp rear right
7/97	Movement detector right	10/29	Glove compartment lighting
7/100	Tilt sensor	10/32	Door open warning lamp left rear
7/101	Glass breakage sensor	10/33	Door open warning lamp right rear
7/105	Ambient temperature sensor engine control module (ECM)	10/40	Gear selector lighting
7/115	Collision sensor left front	10/72	Ashtray lighting
7/116	Collision sensor right front	10/97	Entry lighting driver's side
7/117	Audible acknowledgement signal soft-top	10/102	Entry lighting passenger side
7/122	Movement detector 1	10/113	Indicator LED alarm / immobilizer
7/123	Clutch pedal sensor	10/114	Vanity mirror lighting left-hand side
7/124	Brake pedal sensor	10/115	Vanity mirror lighting right-hand side
7/143	Movement detector 2	10/200	Warning lamp coolant level / temperature
7/144	Engine coolant temperature (ECT) sensor		
7/145	Temperature sensor cargo compartment	11A/1-9	Main fuses
7/146	Pressure sensor CNG tank	11B/1-5	Fuses
7/147	Fuel tank filler cover position sensor	11C/1-42	Fuses
7/158	Movement detector 2	15/4	15l-rail
		15/8	X-rail