


FZS600 '98 WIRING DIAGRAM

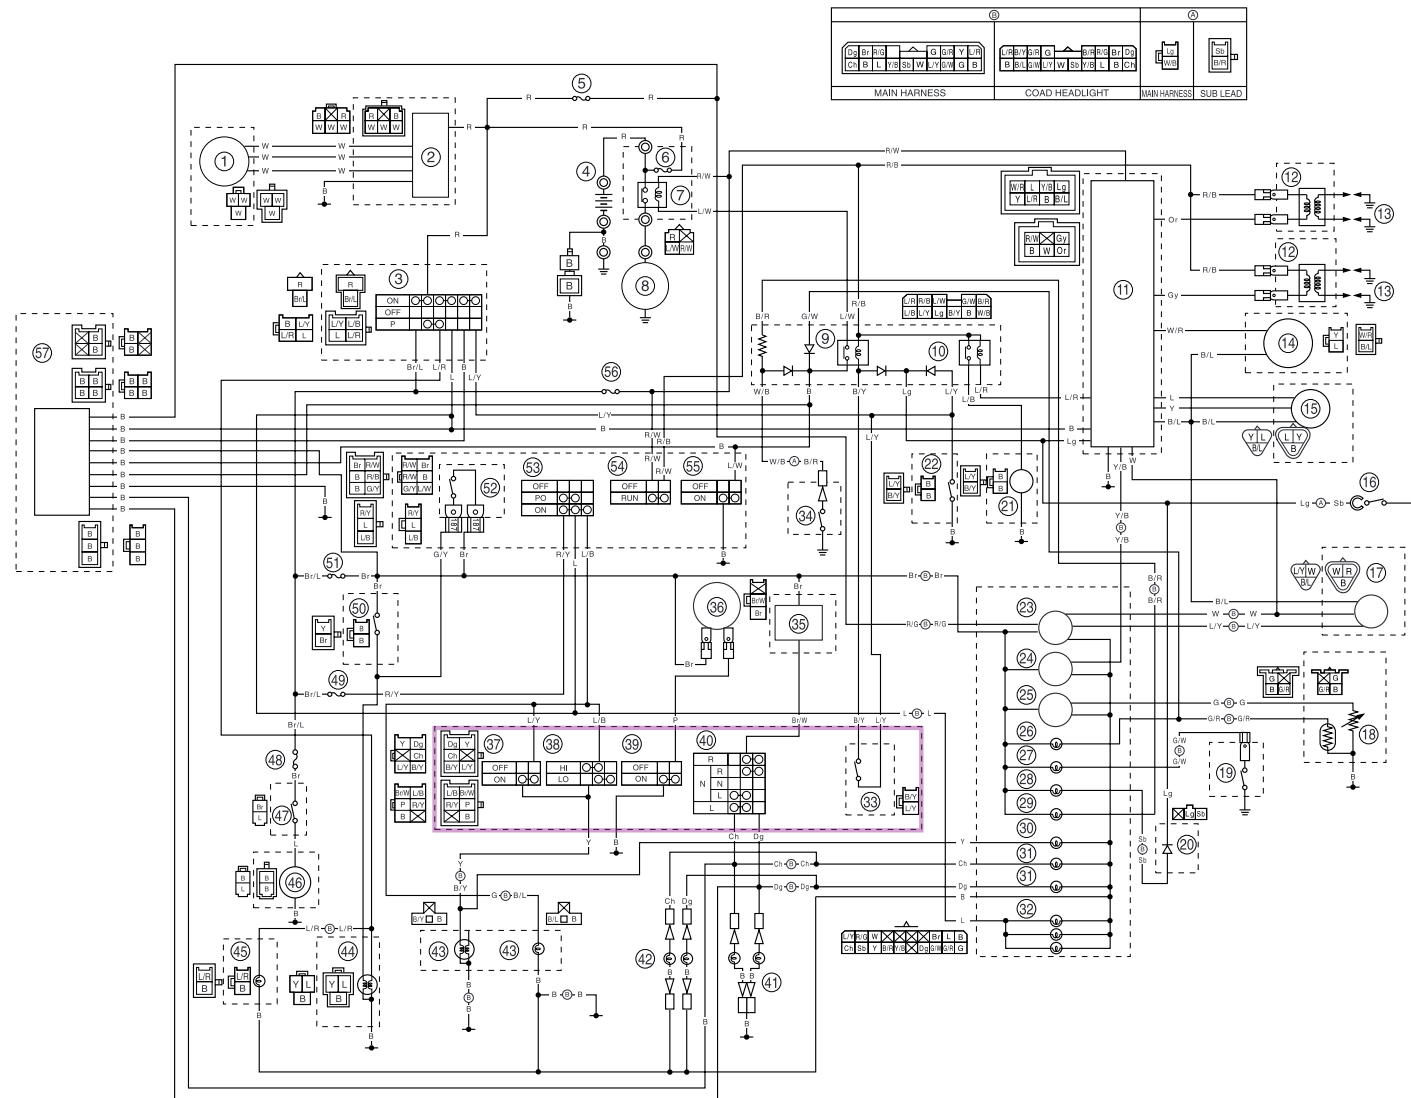

- ① A.C. magneto
- ② Rectifier/regulator
- ③ Main switch
- ④ Battery
- ⑤ Fuse (back up)
- ⑥ Fuse (main)
- ⑦ Starter relay
- ⑧ Starter motor
- ⑨ Starting circuit cut-off relay
- ⑩ Fuel pump relay
- ⑪ Ignitor unit
- ⑫ Ignition coil
- ⑬ Spark plug
- ⑭ Pick up coil
- ⑮ Throttle position sensor
- ⑯ Neutral switch
- ⑰ speed sensor
- ⑱ Fuel sender
- ⑲ Thermo switch (engine temperature)
- ⑳ Diode
- ㉑ Fuel pump
- ㉒ Sidestand switch
- ㉓ Speedometer
- ㉔ Tachometer
- ㉕ Fuel meter
- ㉖ Fuel level warning light
- ㉗ Engine temperature warning light
- ㉘ Neutral indicator light
- ㉙ Oil level warning light
- ㉚ High beam indicator light
- ㉛ Turn indicator light
- ㉜ Meter light
- ㉝ Clutch switch
- ㉞ Oil level switch
- ㉟ Flasher relay
- ㊱ Horn
- ㊲ Pass switch
- ㊳ Dimmer switch
- ㊴ Horn switch
- ㊵ Turn switch
- ㊶ Front turn signal light
- ㊷ Rear turn signal light
- ㊸ Headlight
- ㊹ Tail/Brake light
- ㊺ Auxiliary light
- ㊻ Fan motor
- ㊼ Thermo switch (fan motor)
- ㊽ Fuse (fan)
- ㊾ Fuse (head)
- ㊿ Fuse (signal)
- 1 Front brake switch
- 2 Light switch
- 3 Engine stop switch
- 4 Starter switch
- 5 Fuse (ignition)
- 6 Alarm (option)

COLOR CODE

B Black	P Pink	B/L . . . Black/Blue	G/W . . Green/White	R/W . . Red/White
Br . . . Brown	Lg . . . Light green	B/R . . Black/Red	G/Y . . Green/Yellow	R/Y . . Red/Yellow
Ch . . . Chocolate	O . . . Orange	B/W . . Black/White	L/B . . Blue/Black	W/B . . White/Black
Dg . . . Dark green	R . . . Red	B/Y . . Black/Yellow	L/R . . Blue/Red	W/G . . White/Green
G . . . Green	Sb . . . Sky blue	Br/L . . Brown/Blue	L/W . . Blue/White	Y/B . . Yellow/Black
Gy . . . Gray	W . . . White	Br/W . . Brown/White	L/Y . . Blue/Yellow	Y/R . . Yellow/Red
L Blue	Y . . . Yellow	G/R . . Green/Red	R/B . . Red/Black	