


## Horn, replacing

### Removal

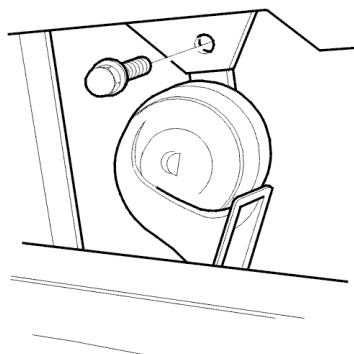

- Remove the radiator grille. See [Radiator grille, replacing](#)
- Remove the screw for the signal horn
- Disconnect the connector.


### Installation

In reverse order. For the tightening torques, see below.

- Screw for the signal horn: **6–10 Nm**.


## Radiator grille, replacing

### Removing the radiator grille

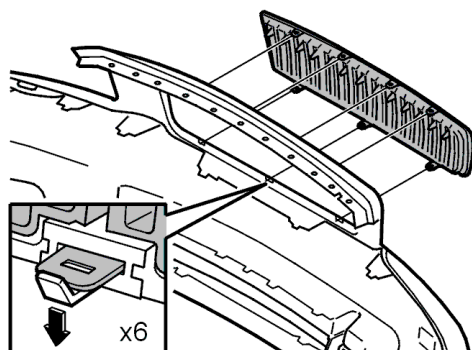

- Remove the seven clips from the casing
- Angle out the top of the casing
- Detach the upper mounting on the radiator grille
- Press the hooks down
- Pull out the radiator grille.

### Removing the badge

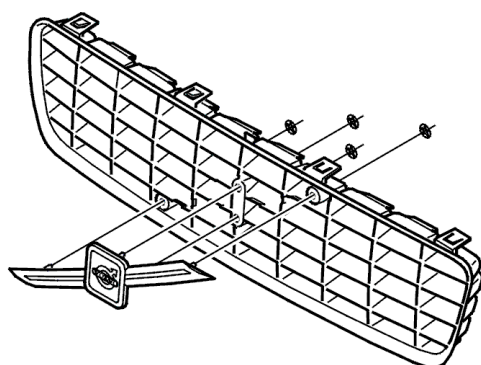

- Remove the radiator grille. See [Removing the radiator grille](#)
- Remove the locking washers.

### Installing the radiator grille

#### Install:

In reverse order.