


53/328 8-cyl.

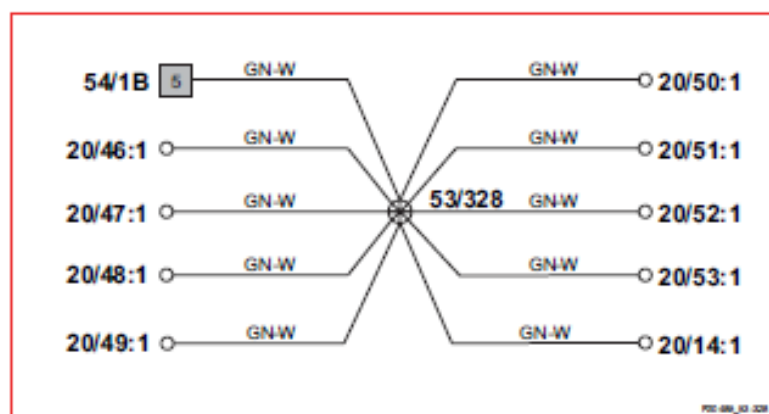

Connectors

54/1B -54/1C

54/1B

14-pin gray

No.	Engine harness			Engine compartment harness		
1	53/303	Branching point	BN	53/397	Branching point	BN
2	53/315 54/99:11	Branching point, 5-cyl. & 6-cyl. Connector, 8-cyl.	GN	11B/12:2	Fuse in engine compartment fuse box	GN
3	53/309 54/129:5 53/335	Branching point, 6-cyl. Connector, 8-cyl. Branching point, Diesel	GN-GR	11B/15:2 53/396	Fuse in engine compartment fuse box Branching point, 8-cyl.	GN-GR
4	53/3002	Branching point	GN-SB	11B/13:2	Fuse in engine compartment fuse box	GN-SB
5	53/328	Branching point	GN-W	11B/10:2	Fuse in engine compartment fuse box	GN-W
6	8/3:1 8/3A:1	Electromagnetic clutch, climate control system, Diesel Electromagnetic clutch, climate control system, 6-cyl. & 8-cyl.	GR	2/22:1	Relay, climate control system	GR
7	7/15:4 53/304	Heated oxygen sensor, Diesel Branching point	GN-BN	11B/14:2	Fuse in engine compartment fuse box	GN-BN
8	6/25:2	Starter motor	GN-R	2/35:3	Relay, starter motor	GN-R
9	-	-	-	-	-	-
10	-	-	-	-	-	-
11	-	-	-	-	-	-
12	6/26B:1	Alternator Control Module (ACM)	GN-W	4/56C:16	Central Electronic Module (CEM)	GN-W
13	4/71:4	Cooling fan control module	VO	4/46A:7	Engine Control Module (ECM)	VO
14	4/46A:73 4/50:6 53/314	Engine Control Module (ECM) Electronic Throttle Module (ETM) Branching point	GN-SB GN	11B/13:2	Fuse in engine compartment fuse box	GN-SB

