

AIR BAG RESTRAINT SYSTEM

SRS WARNING LIGHT

When ignition is turned on, SRS warning light will illuminate. If no SRS faults are detected, SRS warning light will go out after about 10 seconds or immediately after engine is started. If SRS warning light does not go out, a fault exists in system. When SRS detects a fault, warning light will remain on until fault is corrected and memory is cleared. If warning light fails to illuminate, bulb is faulty and/or a short exists in wire to bulb.

STANDBY POWER UNIT

Standby power unit is used to supply power to crash sensor if normal power source (battery voltage) is interrupted.

SYSTEM OPERATION CHECK

Turn ignition switch to ON position (engine not running). If no fault codes are present, SRS warning light should go out after 10 seconds. Following conditions indicate SRS system is malfunctioning and an SRS fault code will be stored in crash sensor memory:

- * SRS light does not illuminate.
- * SRS light does not go out after 10 seconds.
- * SRS light does not go out after engine is started.
- * SRS light comes on while driving.

If SRS fault codes are present, retrieve fault codes. See DIAGNOSIS & TESTING.