

Window lift mechanism rear side door, replacing

Removing the lift mechanism for the rear side door


The window must be in the half open position.

Remove:

- the door panel. See [Panel, rear side door, replacing](#) (-2003) or [Panel rear side door, replacing](#) (2004-)
- the drip guard. See [Drip guard](#)
- the two rivets. See [Removing rivets](#) .

Push the window to its upper position. Secure the window using tape.

- the two rivets. See [Removing rivets](#)
- one nut (M6)
- the window lift mechanism.

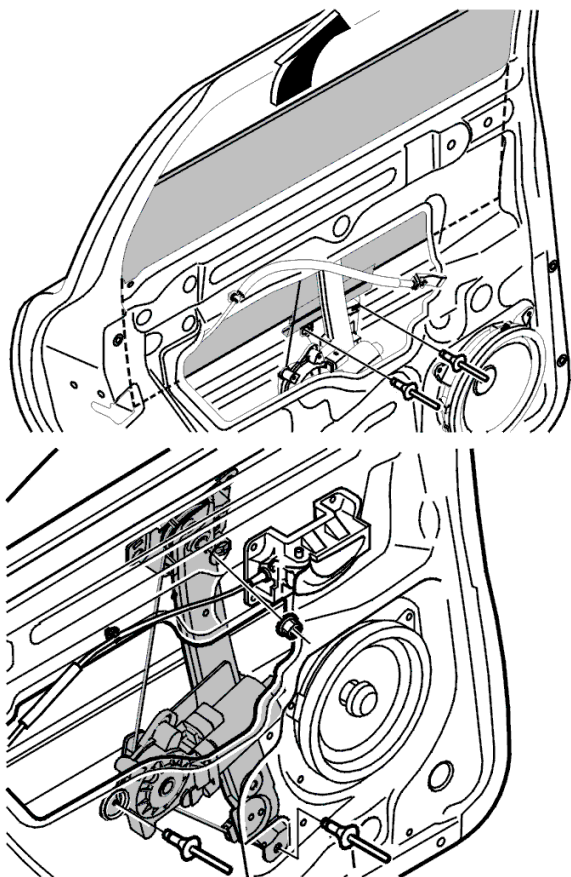

Installing the lift mechanism for the rear side door

Install:

- the power window mechanism
- one nut (M6)
- the four blind rivets
- the drip guard. See [Drip guard](#)
- the door panel. See [Panel, rear side door, replacing](#) (-2003) or [Panel rear side door, replacing](#) (2004-).