



Glove compartment, replacing

Glove compartment, replacing

Remove the soundproofing panel on the passenger side. See [Soundproofing panel, replacing](#).

Open the glove compartment.

Slide the two hooks on each side past the tabs.
Remove the gas strut by pulling it straight out.

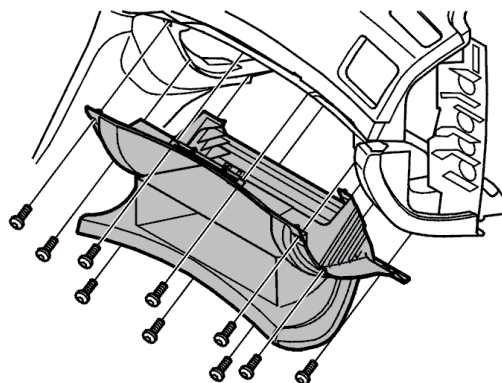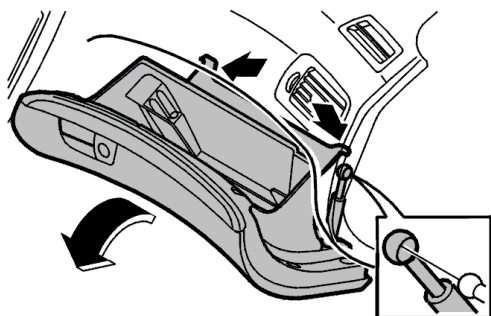

Remove:

- ten screws
- the connector for the glove compartment lighting
- the connector for the foot well lighting
- the glove compartment.

Install:

In reverse order.

Transfer those components that do not need to be replaced.