

Bumper front, replacing


Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Removal

Removing the front bumper

Remove:

- the left and the right trim strip.
- the screws (1), 1 per side
- the 2 x front screws
- the 6 clips, on the upper side of the bumper cover
- the 2 clips on the underneath of the bumper (5).

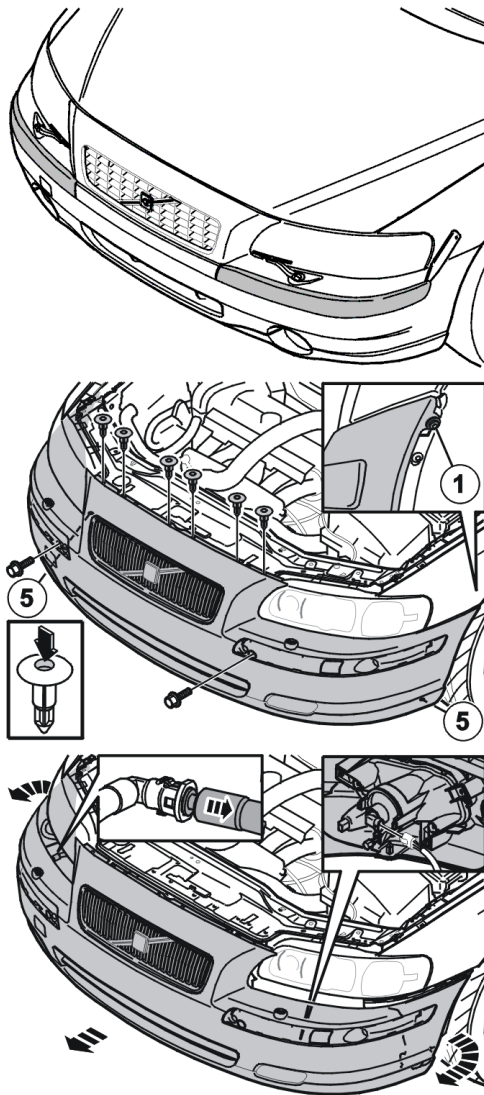

Pull the bumper forward while pulling both the sides outwards so that the edge releases from the side bracket.

Hint: This operation is easier with two people.

Separate the connector for the fog lamp.

Repeat the procedure on the other side.

Disconnect the quick-release connector for the headlamp washer (if applicable).


Transferring components

Transferring components

Transfer:

- the radiator grille. See: [Radiator grille, replacing](#)
- the license plate holder and the license plate
- the fog lamps if applicable. See [Fog lamps, front, replacing](#) .

Transferring the side bracket

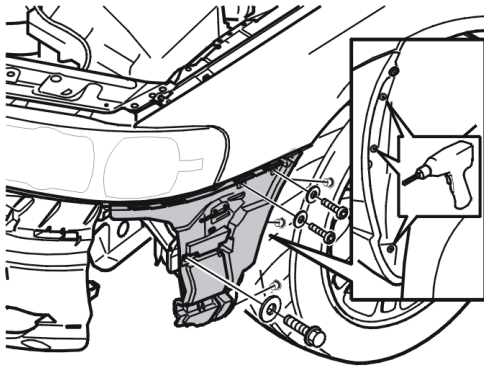

Remove:


- the rivets, 3 per side. See: [Removing rivets](#)
- the screws, 3 on each side.

Transferring the rear section

Remove:


- the 2 clips on the underside of the bumper cover
- the 1 x clip for the washer hose if applicable.

Unhook the rear section from the bumper cover.

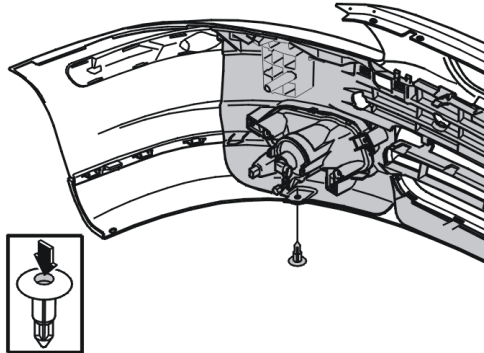

Transferring the spoiler

Unhook the 5 hooks on each side.

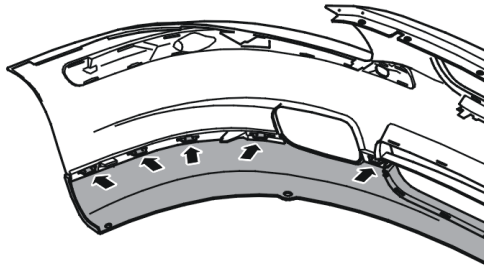

Transferring the headlamp washer nozzles

Transfer the nozzles. See: [Nozzle high-pressure washer headlamp, replacing](#) .

Installation

Installing the front bumper

Note! For tightening torques, see: [Tightening torque](#) .


Install:

- the quick-release connector for the headlamp washer
- the 2 connectors for the fog lamps.


Guide the lugs (3) in to the grooves on the side bracket (4).

Press at the top so that the lugs engage.

Press in the bumper cover as far as it will go.

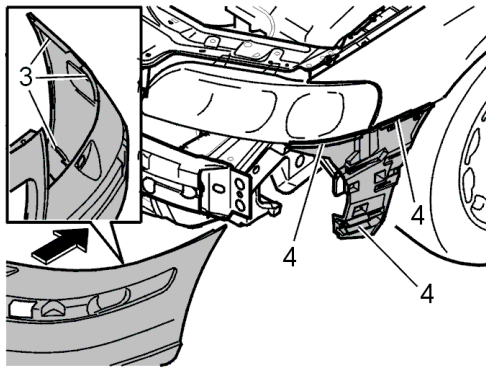

Hint: This operation is easier with two people.

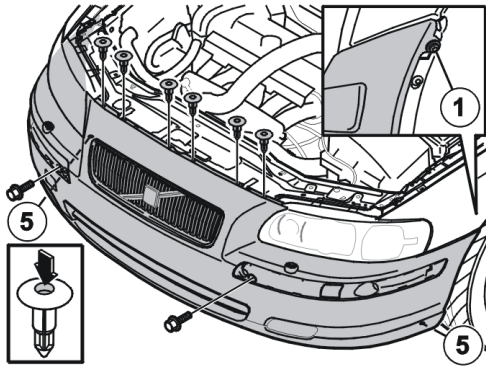

Install:

- the 2 x M8 screws. Tighten
- the 6 clips, on the upper side of the casing
- the 2 clips (5) on the underneath of the bumper
- the trim strip on the left and right-hand sides
- the screw (1), 1 per side. Tighten.