

215: Transmission

XC90, 2008, B6324S, TF-80SC AWD, YV4CZ982081451588, 451588

12/8/2017

**PRINT****215: Transmission****Accessory Drive Belt**

Note! Some variation in the illustrations may occur, but the essential information is always correct.



Removal






Note! Removal steps in this procedure may contain installation details.

Remove the battery.

Refer to: Battery, disconnecting

.

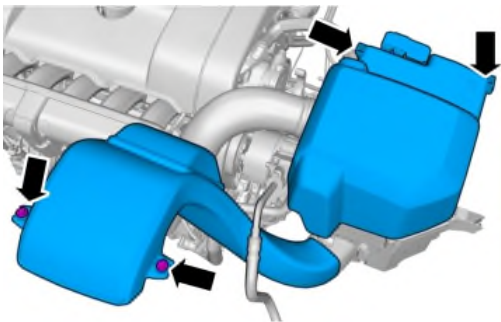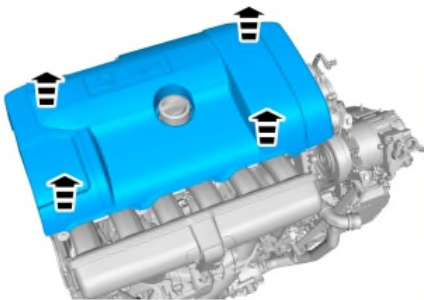

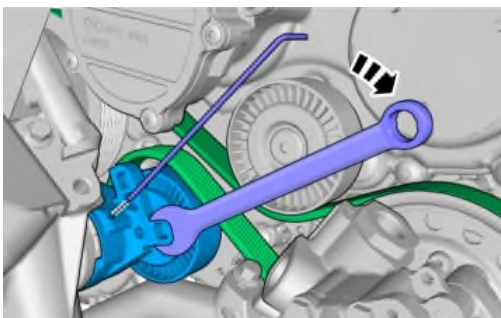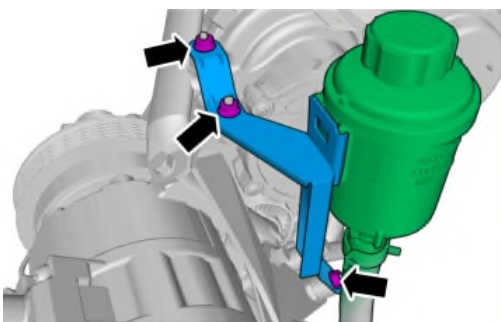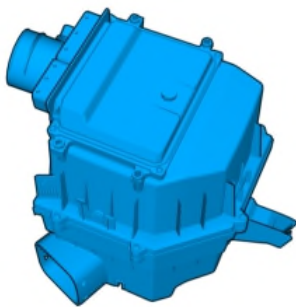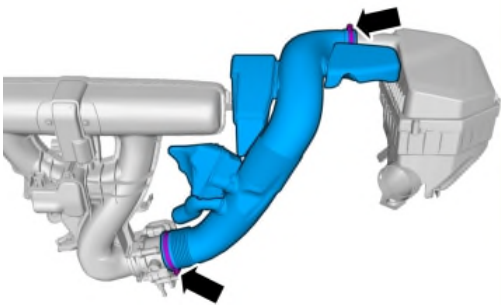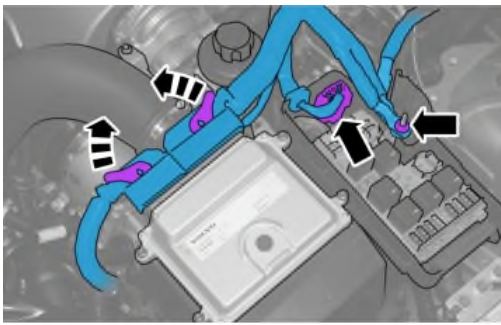

M6.

Refer to: Tightening torque


Use: 19 mm fixed wrench

, slacken the tensioner and relieve the tension on the belt.

Use: 3 mm pin

and lock the tensioner in position.

When installing, check the belt's position on all belt grooves.

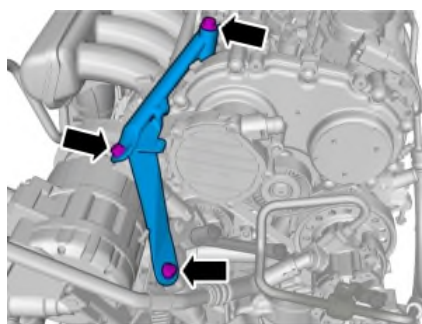


M8.

Refer to: Tightening torque

M10.

Refer to: Tightening torque

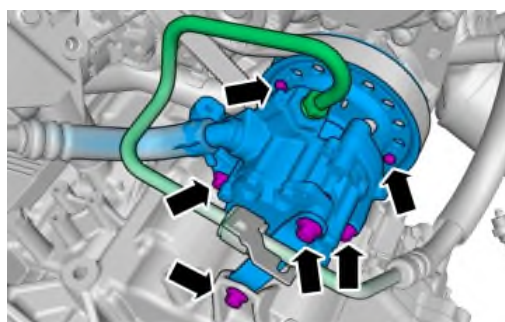

1. the power steering **pump** bracket in the transmission. M8.

Refer to: Tightening torque

2. the power steering **pump's** rear stay. M8.


Refer to: Tightening torque

3. the **water pump** coupling/pulley. M5.

Refer to: Tightening torque

4. Delivery line to power steering **pump**.

Refer to: Tightening torque

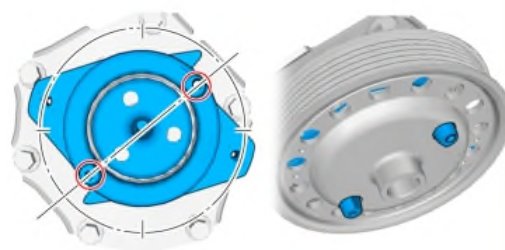

When removing

Remove the pins from the pulley. Rotate the power steering **pump** upward and rearward.




When installing

To facilitate fitting of the **water pump** coupling in the power steering **pump** pulley, turn the coupling until the spikes are in the 8 o'clock and 2 o'clock position as illustrated. Make sure that the pins stick out through the holes in the pulley.

When installing


Make sure that the coupling's spring (2) clicks in position at the bonded part of the **water pump** (1) and that the pins (3) enter the holes of the pulley.

Always use new centering pins (4).

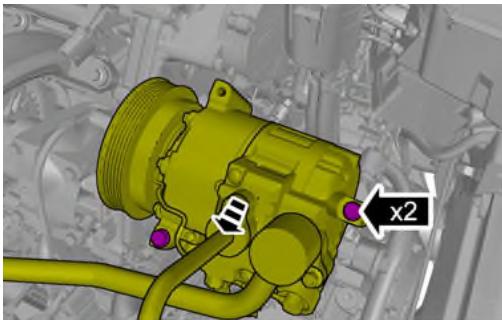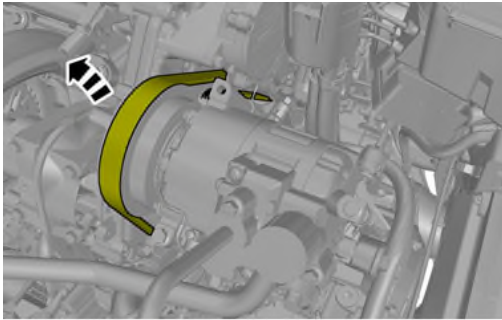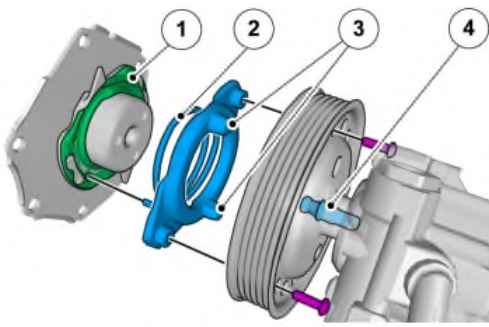


M8.

Refer to: Tightening torque

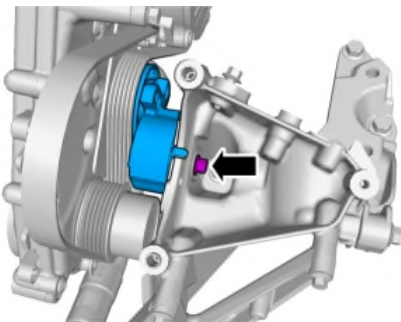

M8.

Refer to: Tightening torque

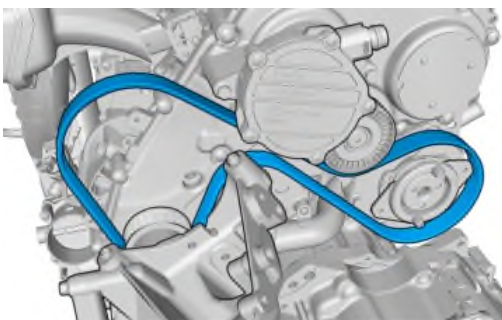

Installation

To install, reverse the
removal procedure.

12/8/2017

PRINT