



Instructions for QBM Polyurethane Upper Firewall Mount


The QBM Polyurethane Upper Firewall Mount is designed for the following models:

- 93-97 850
- 98-00 S70, V70
- 98-04 C70


The following tools are required for installation:

- Torque wrench
- Metric sockets and/or wrenches

1. Remove torque rod by unbolting it from the firewall mount and engine mount:

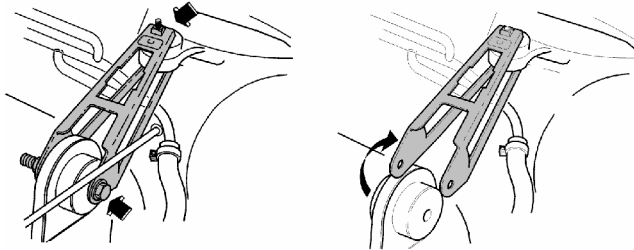

2. Unbolt and remove windshield wiper arms. Remove panel at bottom of windshield by removing the Torx screws, the fuse cover, and the drainage hoses:

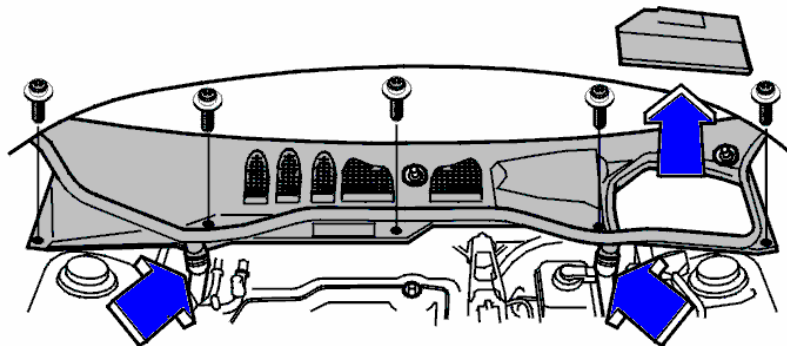

3. Remove the (2) nuts attaching the upper firewall mount. Install the QBM Polyurethane Upper Firewall Mount, and torque nuts to 36 ft-lbs. Reinstall the plastic windshield panel, fuse cover, and drainage hoses. Reattach windshield wiper arms, and torque nuts to 12 ft-lbs.
4. Reattach torque rod. Torque mounting bolts to 36 ft-lbs:

