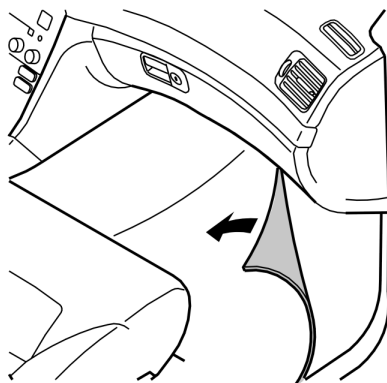


87: Climate control unit, L.H.D

V70 (00-08), 2000, B5204T5, AW55-50/51SN, L.H.D


19/3/2013

**PRINT****87: Climate control unit, L.H.D**
**Blower fan motor /
power unit,
replacing
Fan motor
Removal**
**Remove:**


- the sill trim panel. See Front door sill trim panel
- the soundproofing panel. See Soundproofing panel, replacing
- side panel on the center console. See Center console, replacing: Replacing the side panel
- the glove compartment. See Glove compartment, replacing
- any mounting hooks for child seats
- detach the drain hoses from the engine and the filter housing. Move the drain hoses to one side
- detach the floor carpet at the front. Fold the carpet back.

Engine**Remove:**

- disconnect the connector
- the 5 screws for the blower fan motor
- detach and remove the blower fan motor.

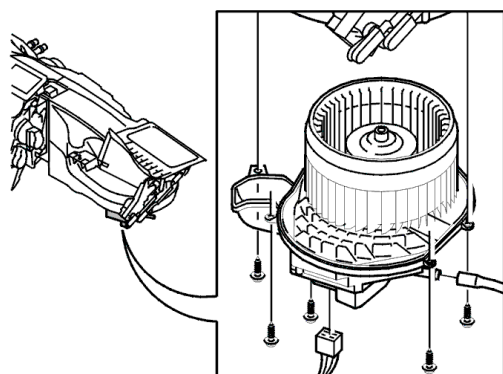**Engine****Remove:**

- the connector
- detach the cover from the motor
- the 2 screws on top
- press and pull out the motor and fan hub. Use a screwdriver for example.

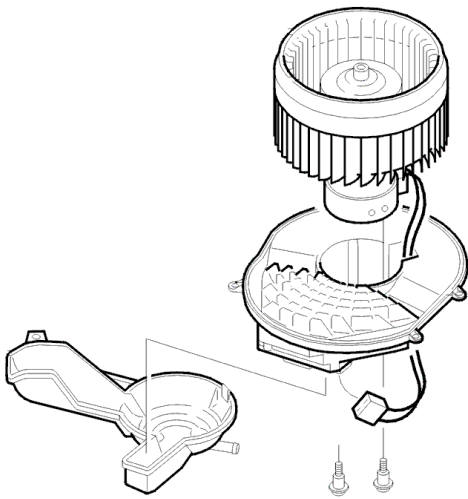

Installation

Install in reverse order.

Power unit


Removal

Remove:

- the blower fan motor with the fan hub as above, see Blower fan motor / power unit, replacing: Fan motor

Remove:

- the power unit, 2 screws.

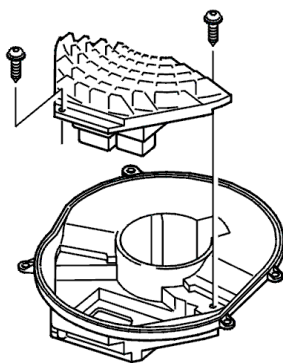

Installation

Install in reverse order.

19/3/2013

PRINT