


Components center console, replacing

Note! The illustrations in this service information are used for different model years and/or models. Some variation may occur. However, the essential information in the illustrations is always correct.

Removal

Removing the center console


Remove the upper section of the center console.

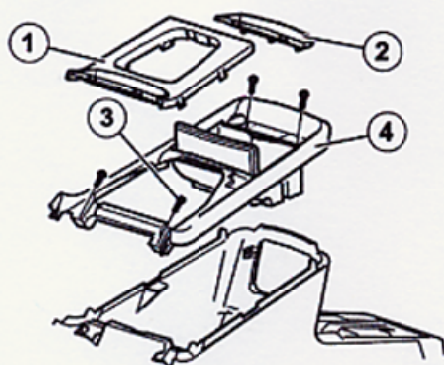

Removing pen holder and mug holder

Remove the pen holder (1).
If the pen holder is bonded, replace using a new pen holder and clip mounting.

Remove the mug holder insert (2) by releasing the hooks on the underside of the center console.

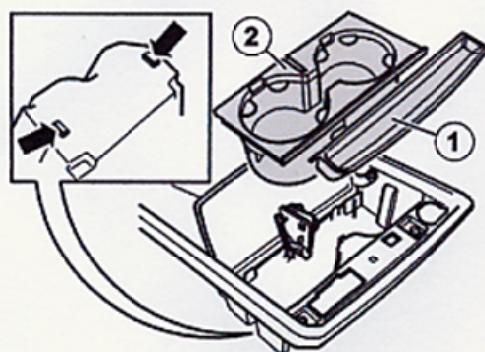


Removing the cover

Move the arm of the mechanism as far back as possible.

Remove:


- the clip with the spring (2) by the cover mechanism
- the 2 clips (1) securing the cover to the center console
- the cover (3).

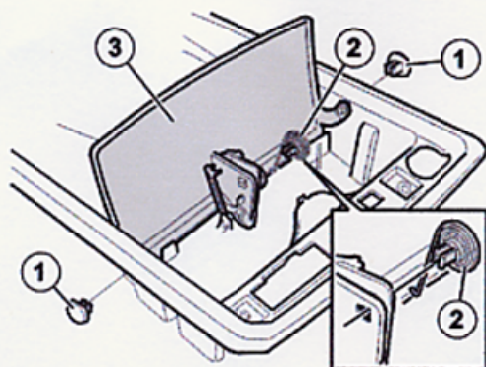

Replacing components

Replacing the lower section of the mug holder

If necessary, replace the mug holder housing.

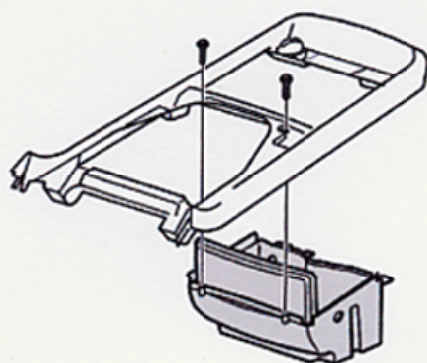


Installation

Installing the panel

Install:


- the cover (3)
- the outer clips (1). The beveled part (2) of the clips must be facing up.

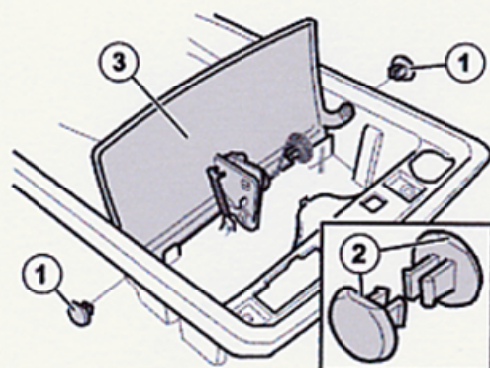

Installing the center mounting for the cover


Check that the internal hook on the spring is secured in the clip.

Align the arm of the spring with the cover. Install the clip (1) with the spring. The hooks (2) on the clip must be positioned vertically.

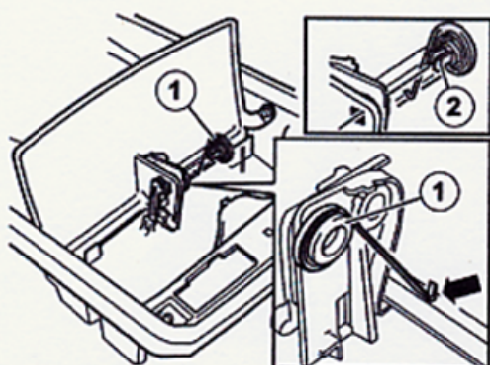


Installing the spring

Move the arm of the spring backwards so that the hook grips in the mounting under the clip.

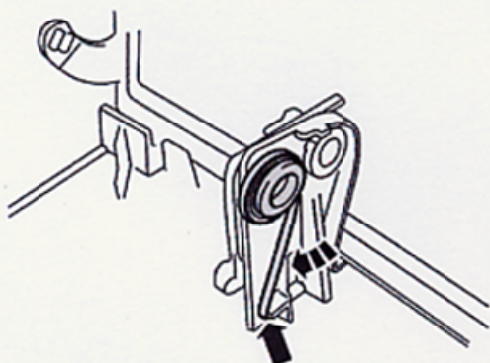

Installing the pen holder and mug holder

Move the arm of the mechanism forwards.
Check the function of the cover.

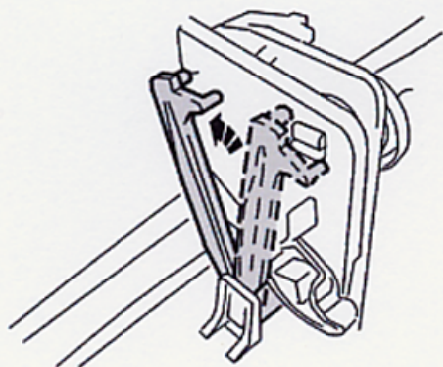


Install the insert and the pen holder.

Installing the center console

Install the upper section of the center console.

Test all the functions that may have been affected.

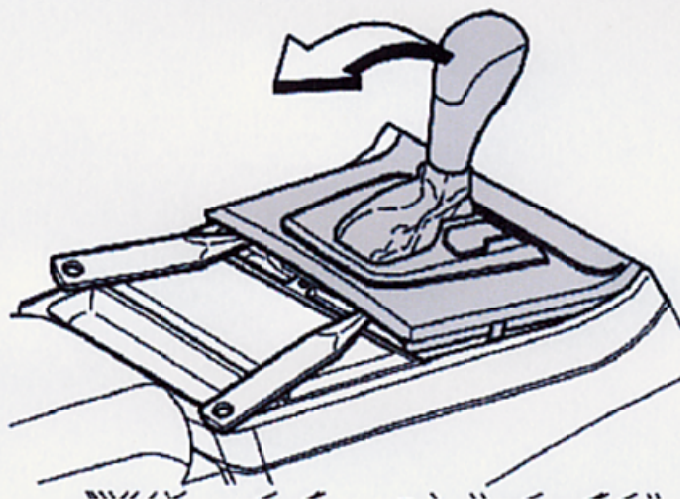

- the gear shift selector panel.

Press the frame out of the gear shift selector panel.