

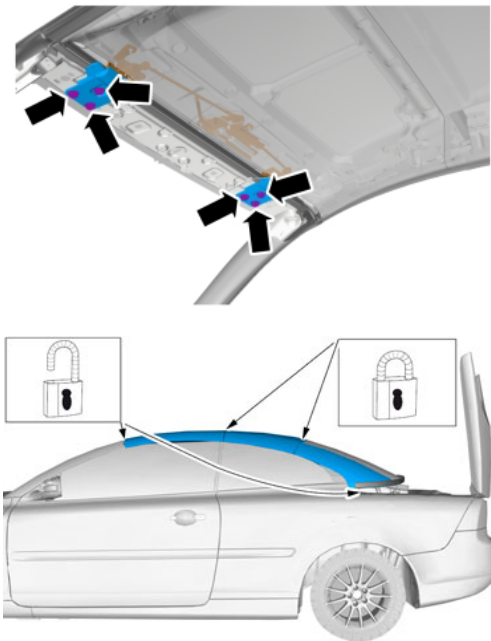
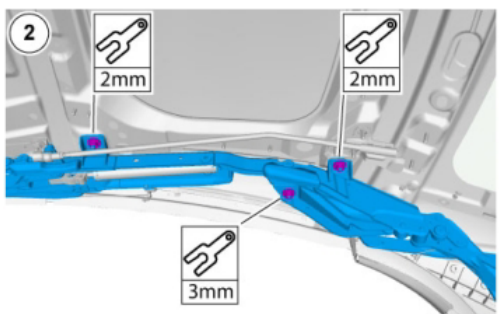




838: Convertible top**C70 (06-), 2011, B5254T7, AW55-****50/51SN, L.H.D, YV1672MC7BJ112517, 112517****4/11/2022****838: Convertible top****PRINT****Roof, adjusting****Removal**Remove Convertible
Top Headliner frontRefer to: Front
headlinerRemove Convertible
Top Center HeadlinerRefer to: Convertible
Top Center HeadlinerRemove headlining
rearRefer to: Headliner
rearRemove Convertible
Top Headliner Center
HingeRefer to: Convertible
Top Headliner Center
Hinge**Adjustment**See information about
door and lidsRefer to: Doors and
hatchesLoosen Headerrail
Trim PanelRefer to: Headerrail
Trim Panel**Torque:** M6, 10 Nm

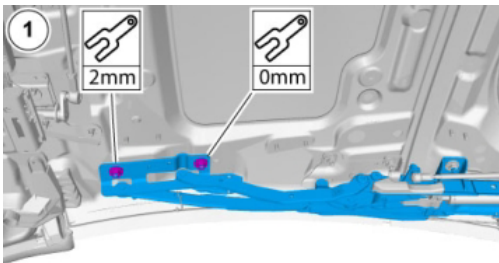


On both sides.

Adjust to specified average value.


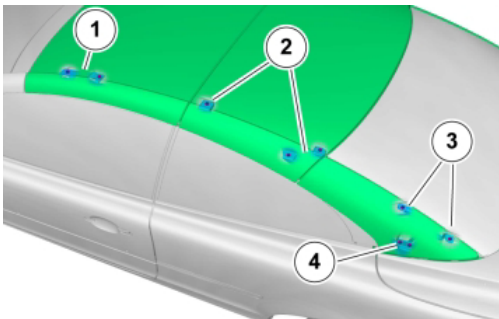


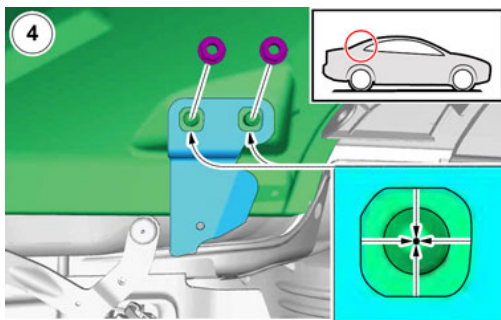
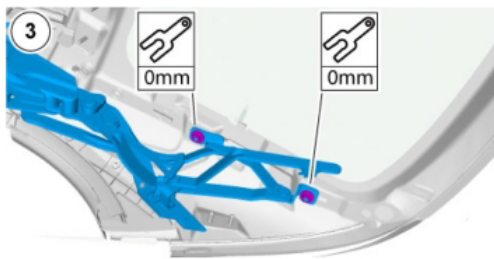


Torque: M8, 24 Nm



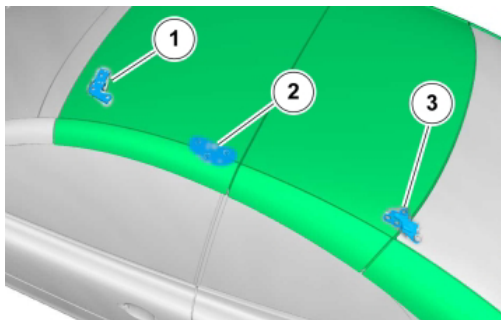


Adjust to specified average value.

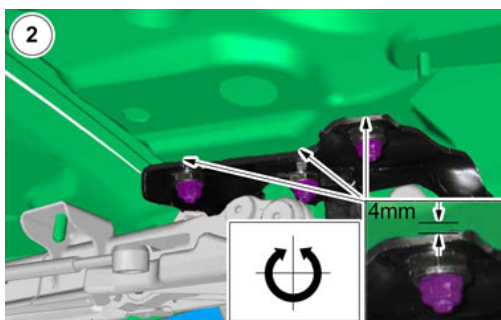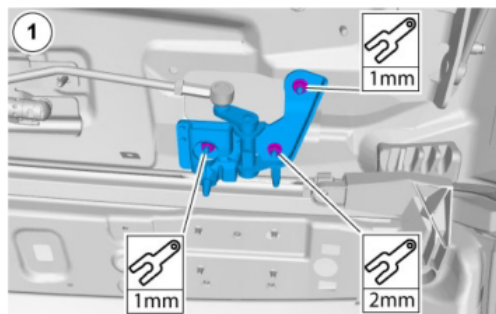

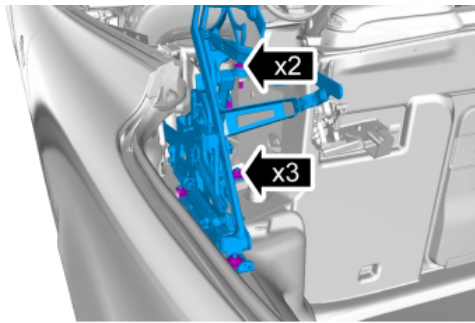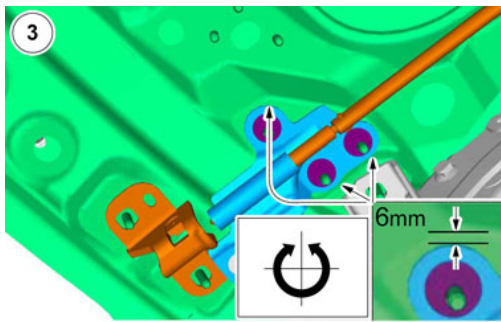


Note! Do not loosen the bolts more than one turn.

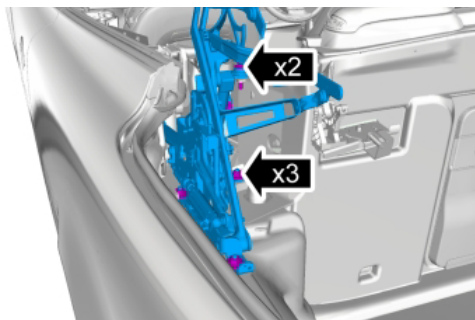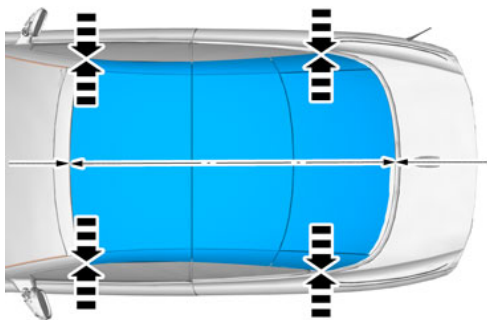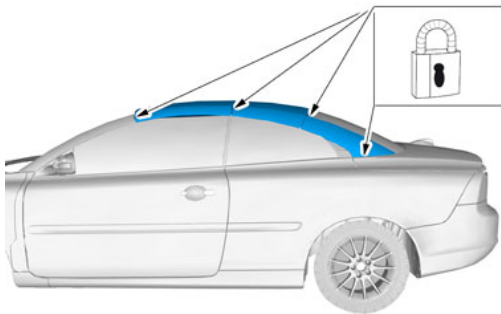


1. **Torque:** M6, 10 Nm
2. **Torque:** M10, 50 Nm

Note! Do not loosen the bolts more than one turn.

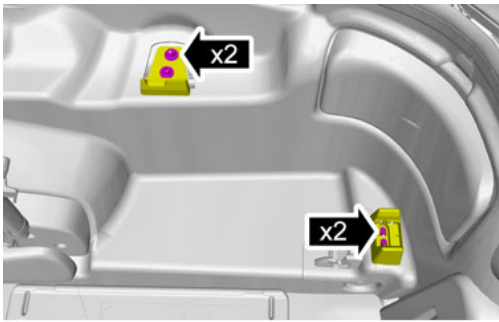


Perform roof,
calibration

Refer to: Roof
calibration

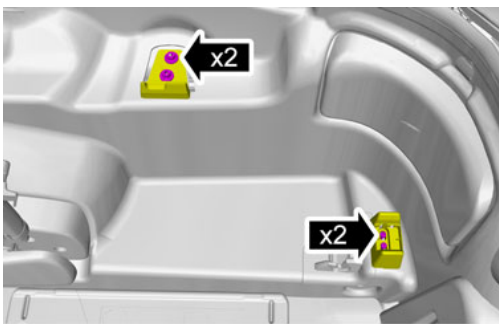

Torque: M6, 10 Nm

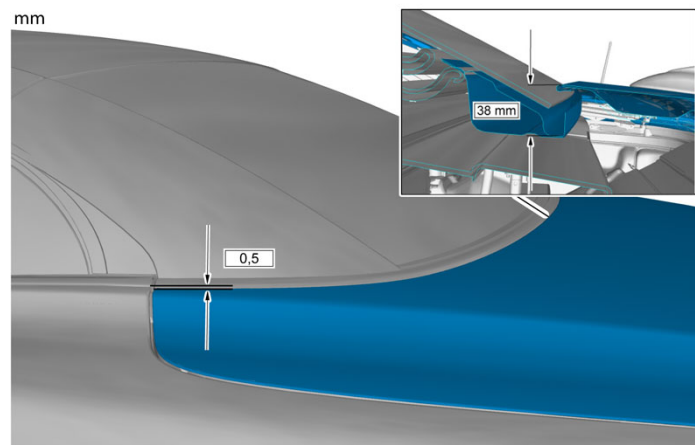

Installation

Install headlining rear

Refer to: Headliner
rear

Install headlining
middle

Refer to: Convertible
Top Center Headliner

Install hinge
headlining front

Refer to: Convertible
Top Headliner Center
Hinge

Install headlining
front

Refer to: Front
headliner

Install Header rail
Trim Panel

Refer to: Headerrail
Trim Panel

Perform window side
door, adjustment

Refer to: Window,
side door, adjustment

Perform Door Window
and Rear Quarter
Window Water Leak
Check

Refer to: Door
Window and Rear
Quarter Window
Water Leak Check

4/11/2022

PRINT