


Loudspeaker front side door, replacing

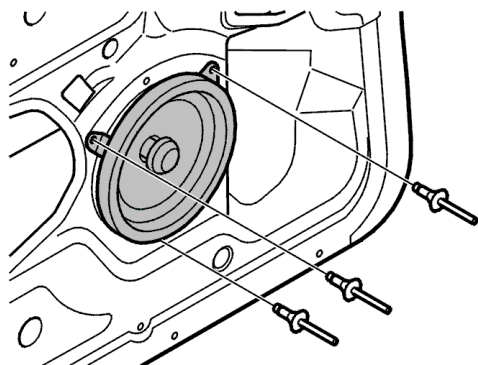

Replacing lower loudspeakers

Remove:

Remove the door panel. See [Panel, front side door, replacing](#) (-2003) or [Panel front side door, replacing](#) (2004-).

Drill out the 3 blind rivets retaining the loudspeakers in the door.

Disconnect the connector.

Install:

In reverse order.

Note! Always use new blind rivets, P/N 982565.



Panel, front side door, replacing

Panel, front side door, replacing

Ignition off.
Remove the key.

Note! The key must be removed to ensure that the ignition is not switched on by mistake.

Note! After the key has been removed: Wait 1 minute before starting work.

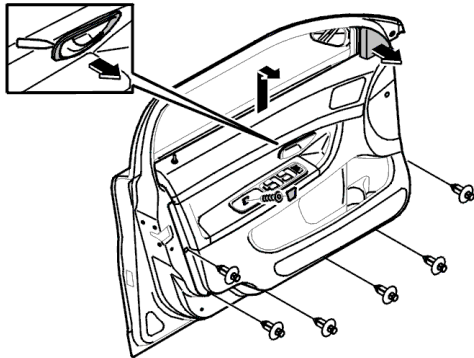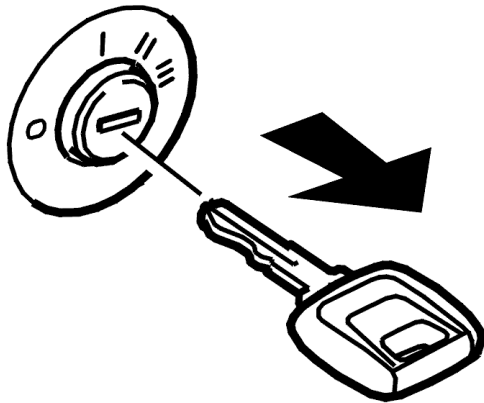

Remove:

- the side piece for the door mirror
- the surround for the inner door opener
- the cover in the inner door handle
- the screw by the inner door handle
- the press clips.

Carefully tap the bottom of the panel to release it.

Pull the upper edge of the panel inward.
Disconnect the connector.

Install:

In reverse order.

Note! The door panel assembly is not available as a replacement part.

Components must be transferred from the old door panel. See [Transferring components](#)