Vacuum Hose Diagram

From TurboControlValve:
→ Turbo Nipple
→ Actuator
→ Fresh Air Hose (MAFsensor)

From Intake Manifold:
→ CBV
→ Evap Valve

Source: VADIS

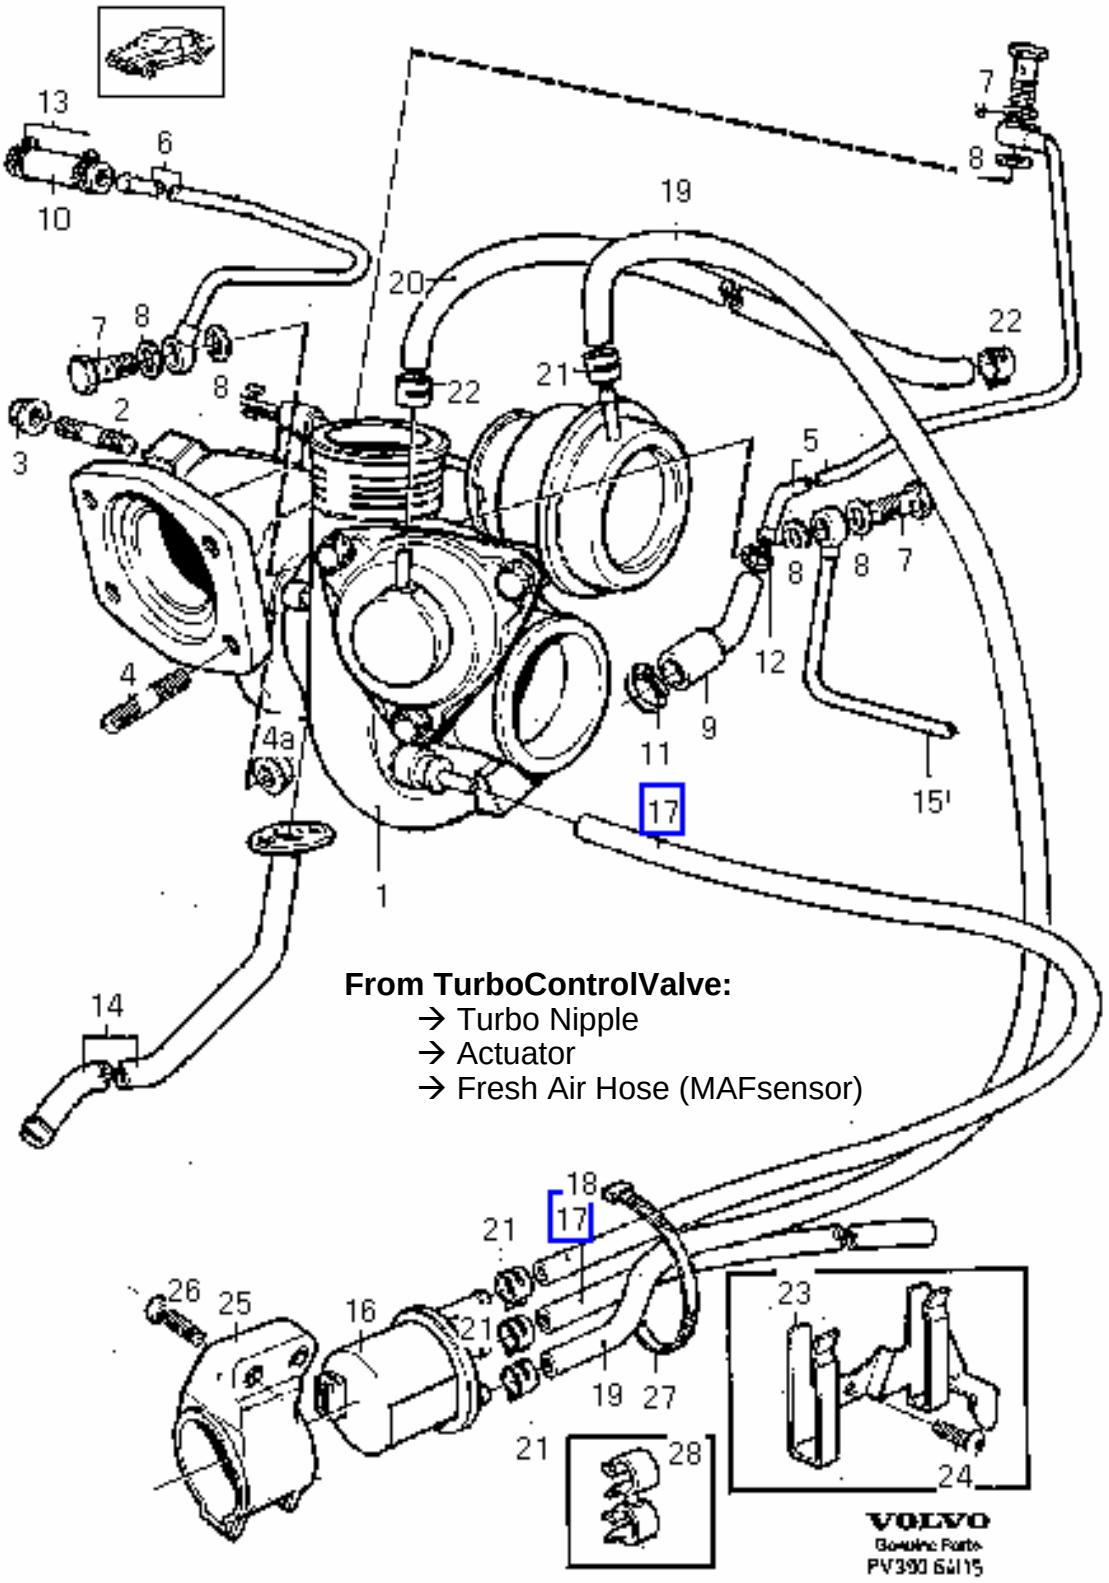

From TurboControlValve:

→ Turbo Nipple
→ Actuator
→ Fresh Air Hose (MAFsensor)

From Intake Manifold:

→ Evap Valve

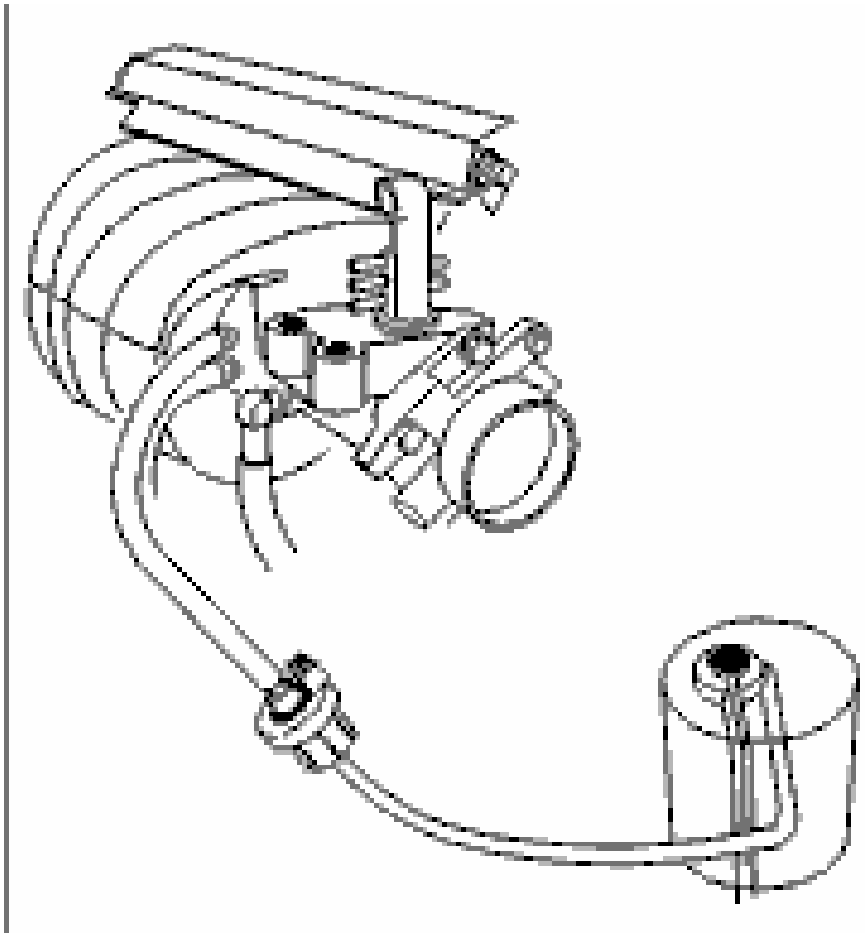

From Intake Manifold:

→ CBV

D

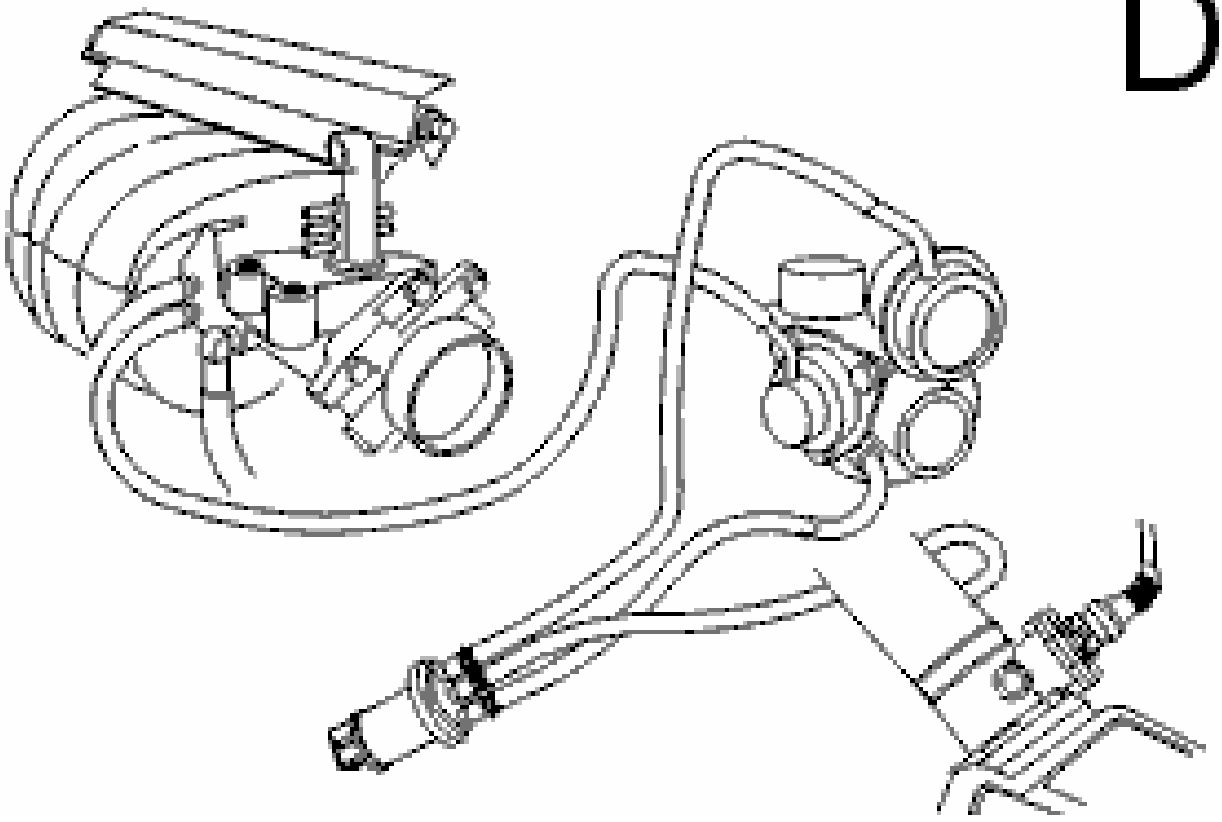

From TurboControlValve:

→ Turbo Nipple

→ Actuator
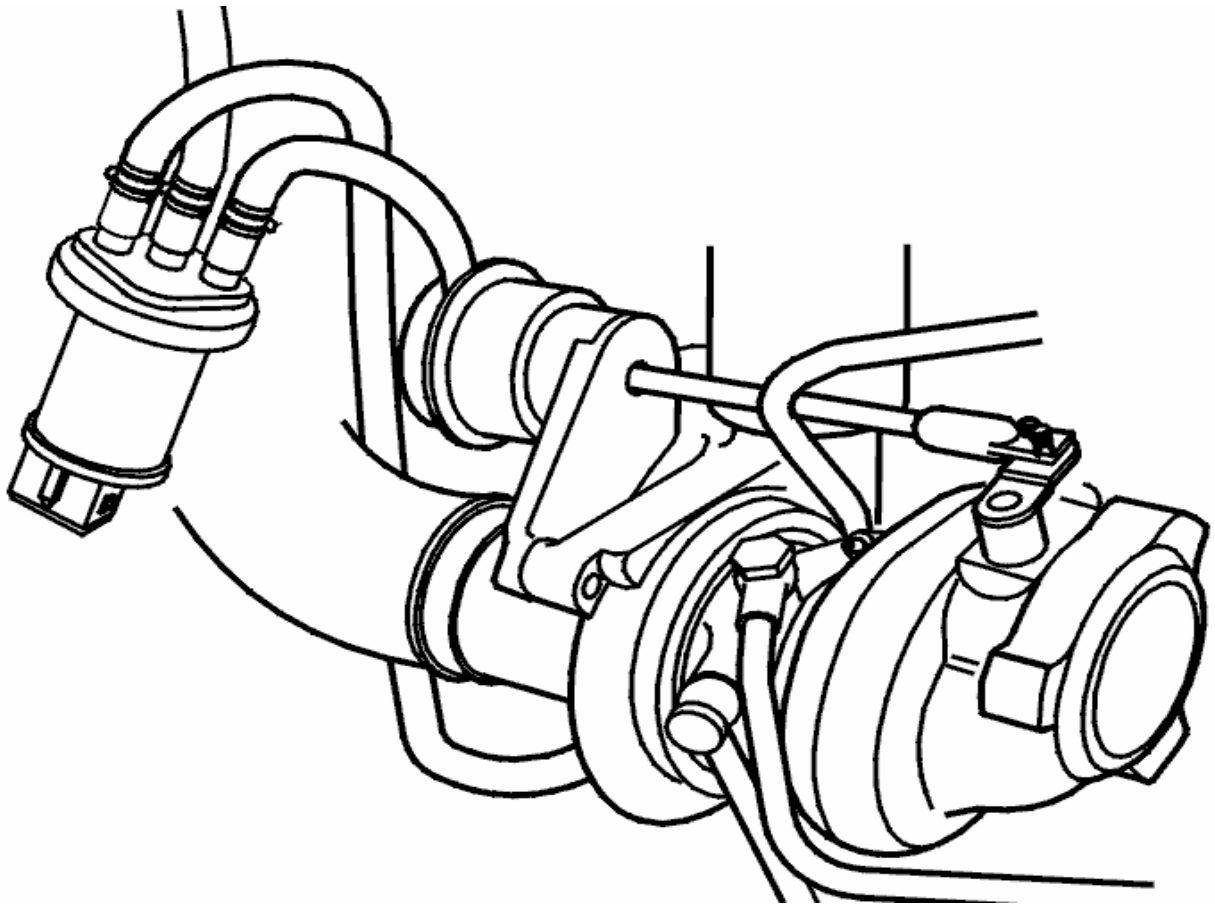
→ Fresh Air Hose (MAFsensor)