

## Parking brake, adjustment

**Hint:** The cable must be adjusted if the lever reaches the 11th notch.

**Note!** The car must be resting on the ground when the parking brake is adjusted.

**Note!** If a cable has been replaced, the brake must be applied 8-10 times before final adjustment is carried out.

**Note!** The following applies if the parking brake shoes have been replaced: Apply brake lightly, drive 200-300 metres at max.30 km/h to bed in the linings against the drum and carry out final adjustment.



**Remove ashtray and holder from rear of parking brake cover**

**Tap out spring sleeve (earlier type only)**

Use screwdriver and hammer.


Tap sleeve to free from adjusting screw.

**Adjust cable (earlier and later versions)**

Adjust until lever can be tightened to max. 7-8 notches (of which the first two should be free travel). Braking action should be felt at fourth to sixth notch.



Earlier version

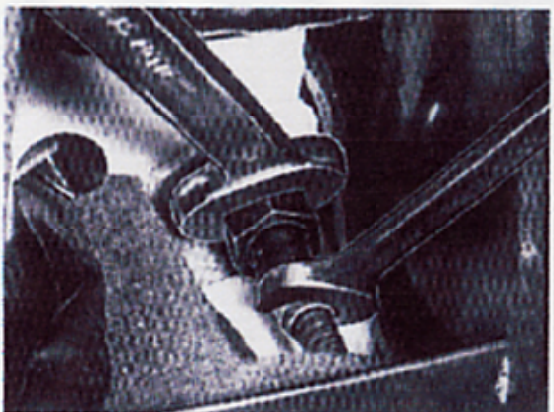

Later version

**Reinstall ashtray and holder**